



General installation instructions for WISA-Pro panels

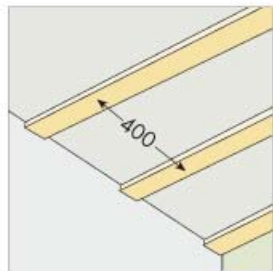

1. Make sure that the joists are level. The maximum joist span in ceilings is 400 mm and in walls 600 mm.

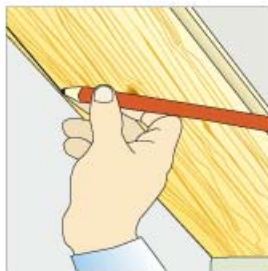


2. If the wall is uneven, draw the contour of the wall on the panel and saw the panel along the line.




3. Attachment option A. Attach the panel at the tongue.



4. Attachment option B. Attach the panel at the groove (not recommended for panels wider than 120 mm).

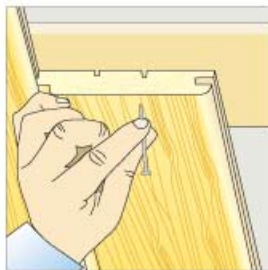




5. Attachment option C. Attach the panel at the face using two nails.

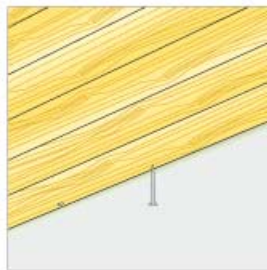

6. Leave an expansion gap of approximately 10mm between the panel and the wall. Attach the last panel also at the side.

Installation tips

Pay sufficient attention to planning. Horizontal panelling makes the room look wider and lower, vertical panelling makes it look higher and narrower. The panels can also be installed diagonally or only on one part of the wall. Panelling is usually installed on the ceiling so that light falls along the length of the panel.

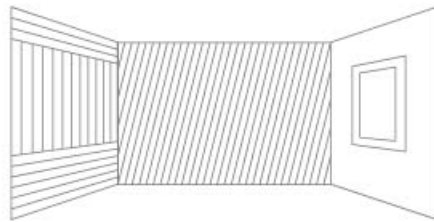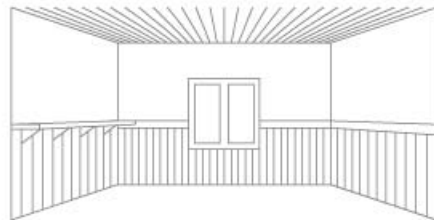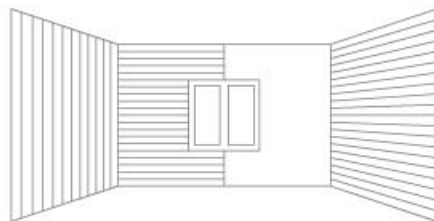

- The panels are ready for installation. It is recommended, however, to let the panels acclimatise in the original wrapping for a couple of days in the room where they will be installed.
- For installation you will need the following tools: a measure, a hammer, a saw, nails (using a nail gun makes installation easier).
- The recommended nail length is 2.5 times the thickness of the panel.
- Do not install a defective or damaged panel.